

PRODUCT SEAKEEPER 2

#### **DESCRIPTION**

Instructions for the unpacking of the Seakeeper 2 shipping crate.

### **PROCEDURE**

- 1. **INSPECT** crate **AND NOTE** any damage per <u>TB-90740 Seakeeper Crate Receipt Inspection</u>.
- 2. With clip removal tool (attached to crate exterior shown in image), **REMOVE** metal clips at top of crate. [See instructions on ATTACHMENT for details]



- 3. **CAREFULLY REMOVE** lid.
- 4. **REMOVE** four sides of crate.
- 5. **MAINTAIN** Seakeeper bolted to pallet until ready to install.
- 6. **REMOVE** top cover of Seakeeper to access lifting eyes of enclosure:
  - a. **RELEASE** push pins with plastic tool to not scratch painted surfaces.





Page 1 of 4

Document # 90493-3




PRODUCT

SEAKEEPER 2

### **CAUTION:**

### DAMAGE TO HOSES OR CABLES MAY OCCUR FROM LAG SCREW REMOVAL.

7. When ready to install, **REMOVE** 3/8-16 hex head cap (HHC) screws at each corner of frame with 9/16-in. socket/wrench. [Screws circled in image]

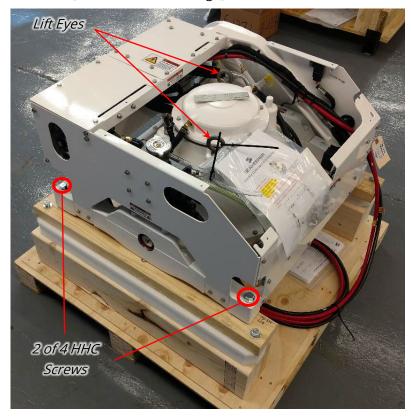

Page 2 of 4 www.seakeeper.com




PRODUCT SEAKEEPER 2

### **CAUTION:**

### DAMAGE TO SEAKEEPER ENCLOSURE MAY OCCUR IF LIFTED BY SHORT SLINGS.

8. **ATTACH** long slings or spreader bar to lifting eyes (as shown in images below) at top of enclosure **AND LIFT** Seakeeper for placement.

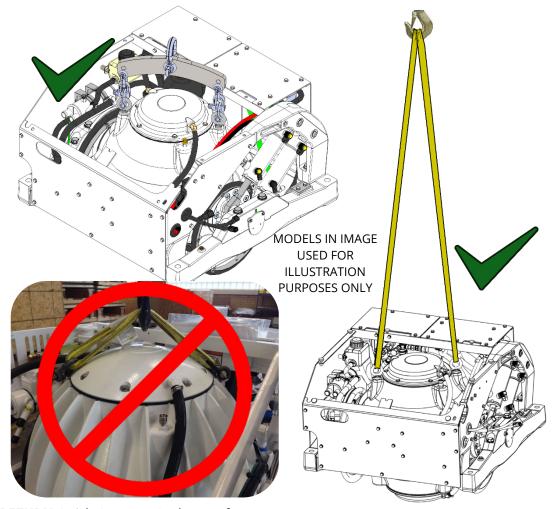

9. **RETURN** Quick-Crates to Seakeeper for reuse.

### \*\*\*\*\*\* **END** \*\*\*\*\*\*\*

Revision	Description	Approval	Date
2	Crate change	BRD	23MAY2019
3	Updated model. Crate change.	A Patricio	29MAR2023

Page 3 of 4 www.seakeeper.com




PRODUCT

**SEAKEEPER 2** 

#### **ATTACHMENT**

Quick-Crate Instructions:

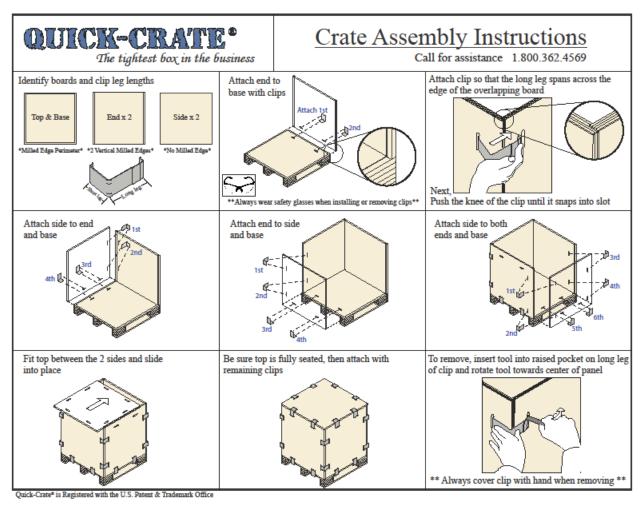

Page 4 of 4 www.seakeeper.com