

ITEMS NOT SHOWN TO SCALE, SOME ITEMS MAY APPEAR LARGER THAN NORMAL

REV NO.	ECN NO.	ZONE	DESCRIPTION	DATE	APPRVD.
2	742		SHIPPING CRATE CHANGE	6/21/2019	BRD



SEAKEEPER MANUALS

SEAKEEPER MANUALS ARE AVAILABLE ON THE SEAKEEPER WEBSITE
WWW.SEAKEEPER.COM/TECHNICAL-LIBRARY
 SELECT YOUR SEAKEEPER MODEL AND DOWNLOAD THE INSTALLATION, OPERATION AND DRAWING MANUALS. THESE MUST BE THOROUGHLY READ THROUGH BEFORE ATTEMPTING TO INSTALL OR OPERATE.

<p>Installation Manual</p> <ul style="list-style-type: none"> Mechanical Installation & PC-120 Guide Electrical Installation Cooling Installation Startup Installation Checklist and Required Supplies 	<p>Operation Manual</p> <ul style="list-style-type: none"> System Overview System Operation Power Failures, Alarms, and Troubleshooting Maintenance Warranty, Limit of Liability, Property Rights Specs and Summary
--	---

Drawing Manual
Contains referenced installation drawings

SEAKEEPER

44425 PECAN COURT, SUITE 151
 CALIFORNIA, MARYLAND, 20619, U.S.A
 PHONE: 410-326-1590
 FAX: 410-326-1599
 E-MAIL: customerservice@seakeeper.com

QUICK START GUIDE

Product: SEAKEEPER GYRO WITH TOUCHSCREEN DISPLAY Document #: 90447 Rev: A Page: 1 of 1

Start-up

- Turn on the power to the Seakeeper.
- When the power is turned on the DISPLAY will initialize and the HOME screen will appear.

<p>To turn the Seakeeper on, press the power On/Off button. The button will turn blue.</p>	<p>The progress bar will appear to indicate how soon the Seakeeper will be available for stabilization.</p>
<p>When the Seakeeper is up to the minimum operating speed, the stabilize button will appear. At this point, the Seakeeper is available for stabilization.</p>	<p>When the Seakeeper reaches its maximum operating speed, the progress bar will disappear and the Seakeeper is available for maximum stabilization.</p>

Stabilization
For stabilization at sea or at anchor after the Seakeeper is above the minimum operating speed:

Press the stabilize button. The button will turn blue indicating that the Seakeeper is stabilizing the roll motion.

Shut-Down



- The Seakeeper should be stopped when stabilization is no longer required. Once the vessel is secured in the slip, switch the high current and low current DC power to the Seakeeper off. The flywheel will continue to spin down to zero rpm.

<p>Press On/Off button. The button will turn grey.</p>	<p>When the Seakeeper is turned off the flywheel is still spinning. When the flywheel has come to a complete stop 0 RPM will appear on the service screen indicating that the flywheel has stopped. It may take 2-8 hours to reach 0 RPM. Please refer to the manual for your specific Seakeeper model.</p>
--	---

Seakeeper Gyro Stock Options

Item	Part No.	Seakeeper Gyro Stock Part Description	Qty	Picture	Initial & Date	Comments
1	15860	Seakeeper Gyro Control Panel	1			
2	15877	Seakeeper Gyro Shipping Crate	1			
3	15147	Seakeeper Gyro Trip Cover with Integrated Logo	1			
4	15194	Seakeeper Gyro Power Panel with Control Panel	1			
5	60651	Hex Nut	10			Mount onto 1/2" lag screw and secure. Use spacer in place to top and bottom of hole.
6	60650	Flat Washer	10			Mount onto 1/2" lag screw. Use spacer in place to top and bottom of hole.
7	60649	Hex Nut	2			These components should not be separated. Attach lag inside the box.
8	60484	Washer	2			
9	60359	Flat Washer	12			
10	60635	Flat Washer	10			
11	60636	Lag Screw	4			
12	60638	Lag Screw	4			
13	60649	Hex Nut	2			
14	60484	Washer	2			
15	60651	Hex Nut	2			
16	90336	Seakeeper Manual Document	1			
17	90395	SK6 Packing List	1			
18	90447	Touchscreen Quick Start Guide	1			

Page 1 of 2

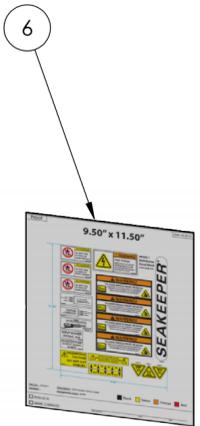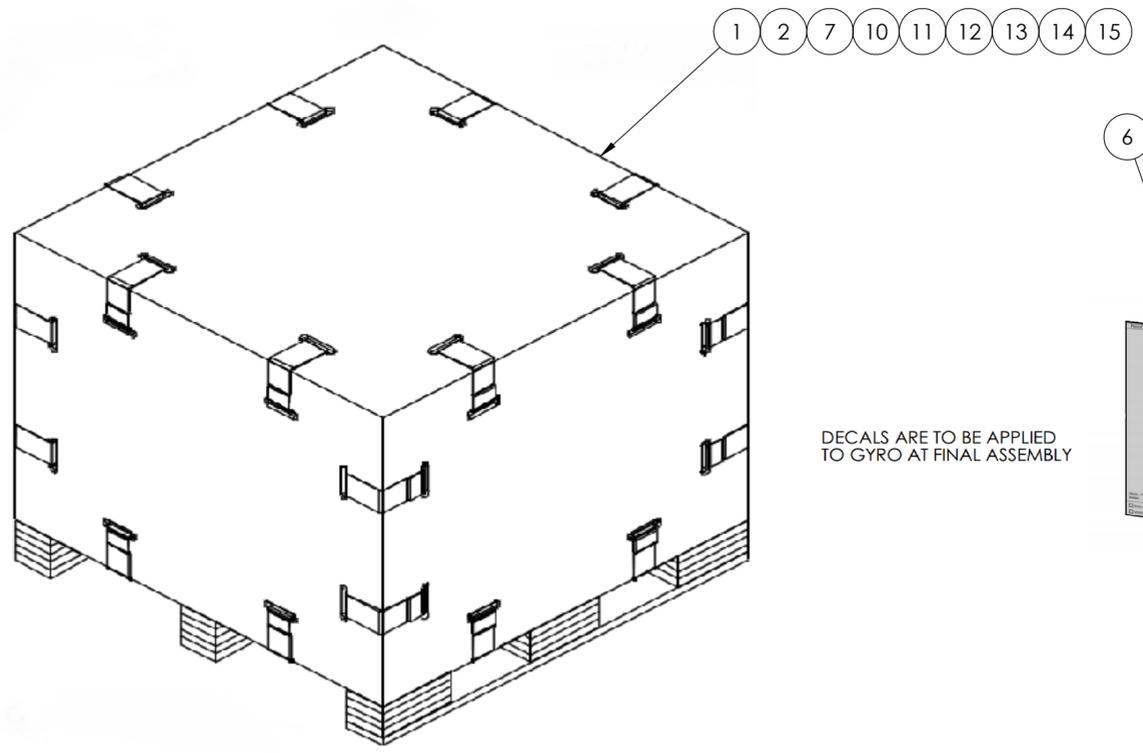

DECALS ARE TO BE APPLIED TO GYRO AT FINAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	QTY.	NOTE
18	90447	TOUCHSCREEN QUICK START GUIDE	1	
17	90395	SK6 PACKING LIST	1	
16	90336	SEAKEEPER ELECTRONIC MANUAL DOCUMENT	1	
15	60651	SCREW, HEX HD CAP, 3/8-16 X 3.75" LG, GR 5	2	
14	60650	FLAT WASHER, 3/8" SCREW SIZE	4	
13	60649	HEX NUT, NYLOCK, 3/8-16, GR 5	2	
12	60638	1/2" LAG SCREW, 6" LONG	4	
11	60636	1/2" LAG SCREW, 3" LONG	4	
10	60635	1/2" FLAT WASHER, NYLON	10	
9	60485	SCREW, BUTTON HD SKT CAP, M10-1.5 X 16MM LG	2	
8	60484	WASHER, FLAT, .75OD X .375ID X .062THK	2	
7	60359	1/2" FLAT WASHER, STEEL	12	
6	40513	SK6 DECAL SHEET	1	
5	40512	SK6 SERIAL PLATE	1	
4	40481	ZINC ANODE DECAL	2	
3	40446	ZINC ANODE, 3/8" NPT PLUG, 1/2" DIA X 1.25" LG	2	SPARES
2	12134	SK6 SHIPPING CRATE COMPONENTS	1	WOOD & FOAM
1	12131	SK6/9 COLLAPSIBLE SHIPPING CRATE	1	

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF SEAKEEPER INCORPORATED. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF SEAKEEPER IS PROHIBITED.

WEIGHT - LBS: ---

MATERIAL: ---

DRAWN: WHK DATE: 14SEP2016

ENG APPR: DATE:

PROD APPR: DATE:

45310 ABELL HOUSE LANE, SUITE 350, CALIFORNIA, MD 20619

NAME: SK6/5 OTHER SUB-SYSTEM, SERVICE REFERENCE

DWG NUMBER: **11675-SP**

REV. NO. SHEET NO.: **2** 1 OF 1